

# Orbit POCKETLADER

11/05



 **Orbit**<sup>®</sup>  
**electronic**  
Hard- & Software Engineering

©2002-2005 Orbit electronic

Falkenweg 32, 52379 Langerwehe, Germany

<http://orbit-electronic.de>

## Contents

Preface.....	3
Safety Notes.....	4
Technical Specifications.....	5
Connectors.....	6
Controls.....	7
Turning On and Off.....	8
Charging and Discharging.....	9
1. NiCd and NiMh (NiXx) Batteries .....	9
2. Lithium Ion and Lithium Polymer Batteries.....	14
3. Lead and Lead Acid Batteries (Pb).....	18
Setup Mode.....	22
Configurable Setup Parameters.....	23
The SIO Interface.....	25
Updating the POCKETLADER Firmware.....	26
Specifications of the SIO Interface.....	28
Accessory: Orbit LiPo-Checker 4.2 V.....	29
Recommended Charging Currents (Overview) .....	30

## Preface

With the Orbit POCKETLADER, we have rounded out our range of reliable Orbit battery chargers. Our objective with this device was to create a compact and rugged charger for universal use. With the POCKETLADER, all common battery types, such as nickel metal hydride (NiMH), nickel cadmium (NiCd), lead acid (Pb) and especially lithium ion polymer batteries (LiPo + Lion) from 1 V to 21 V and 50 mA to 4 A, can be charged and discharged.

Due to a new technical concept, all functions of the battery charger are managed by a fully digital control system. Furthermore, the technical innovations of the POCKETLADER also include a step-up/step-down converter, which can charge up from a single battery cell with a full 4 Amperes. This principle not only assures an extremely low power dissipation, but also a reduction of the operating current to a minimum with small numbers of cells.

The POCKETLADER can be upgraded to support all common and future battery types and charging methods by means of a simple software update. The latest control software (firmware) can be downloaded at any time via the Internet from the Orbit website (<http://orbit-electronic.de>) and saved in the flash memory of your POCKETLADER. Thus your POCKETLADER is optimally prepared for today's and tomorrow's applications.

Its ultra-compact dimensions and robust design make the Orbit POCKETLADER a constant companion for both indoor and outdoor R/C adventures. We wish you a lot of fun and always a good flight or drive!

Yours Orbit team

**Orbit electronic**  
Falkenweg 32  
52379 Langerwehe  
Germany  
Phone: +49 2409 759370  
<http://orbit-electronic.de>

## Safety Notes

In order to guarantee a safe operation of your POCKETLADER, please always observe the safety notes on this page. Orbit electronic takes no responsibility for damage caused by improper use.

- Only connect suitable power adapters (8 V - 15 V DC, stabilised) or batteries for power supply.
- The housing of the charger serves as a heatsink. Operate the device in a place where the heated air around the housing can be dissipated.
- If the charger, the power adapter or the battery gets very hot, immediately interrupt the power supply. A moderate warming of the charger (up to approx. 45 °C / 110 °F) is normal at high-power operation.
- When connecting the battery, take care of the correct polarity (red +, black –).
- Always observe the charging current and voltage limits recommended by the battery manufacturer. Excessive currents or voltages can damage or explode the battery.
- Do not charge or discharge unattended batteries. Especially lithium batteries have a high risk of fire and explosion.
- Do not operate the device in a wet environment (for example, do not place it on wet grass).
- Do not open the housing. In case of defects of the device, please contact Orbit electronic directly.
- Do not clean the device with aggressive detergents, but with a soft, dry or barely damp cloth.


## Technical Specifications

<b>Power supply (reverse polarity protected):</b>	8 V - 15 V DC (stabilised) or battery
<b>Operating current:</b>	typ. 54 mA - max. 5 A
<b>Stand-by current (OFF):</b>	< 100 µA
<b>Output (reverse polarity protected):</b>	1 V - 21,5 V / 50 mA - 4 A Corresponding to: 1 - 12 (14) NiCd/NiMh cells or 1s - 5s lithium or 2 - 16 V lead battery
<b>Charging power:</b>	10 - 65 W (adjustable)
<b>Discharging:</b>	50 mA - 3 A, max. 7 W
<b>LCD display:</b>	2 x 16 characters, backlit
<b>SIO interface:</b>	Connector for PC measurement curves, flash software updates (via Orbit Microlog software) and extensions such as the Orbit LiPo-Checker for individual cell balancing [Art. no. 0605]
<b>Dimensions (L x W x D):</b>	110 x 69 x 24 mm 4.3" x 2.7" x 0.9"
<b>Weight:</b>	200 g / 0.44 lb


## Connectors

On the left side of the housing, you will find the connector for the power supply (stabilised DC power adapter or battery).

On the right side are the plug sockets for the connection of the battery to be charged as well as the SIO interface for data exchange with a PC (e.g. for recording charging curves or for firmware updates).

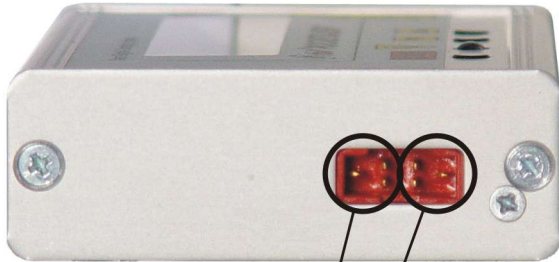


Input      ⊕      ⊖      MPX/MG6  
8V - 15V DC max.5A

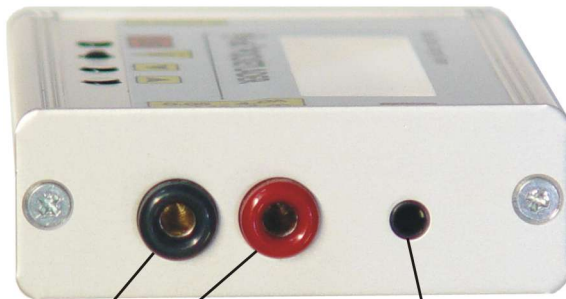

⊖      ⊕      4mm      3.5mm stereo  
output-battery      SIO-interface  
1V - 21.5V DC

## Controls

All keys and displays for controlling the device are located on the upper side of the housing.

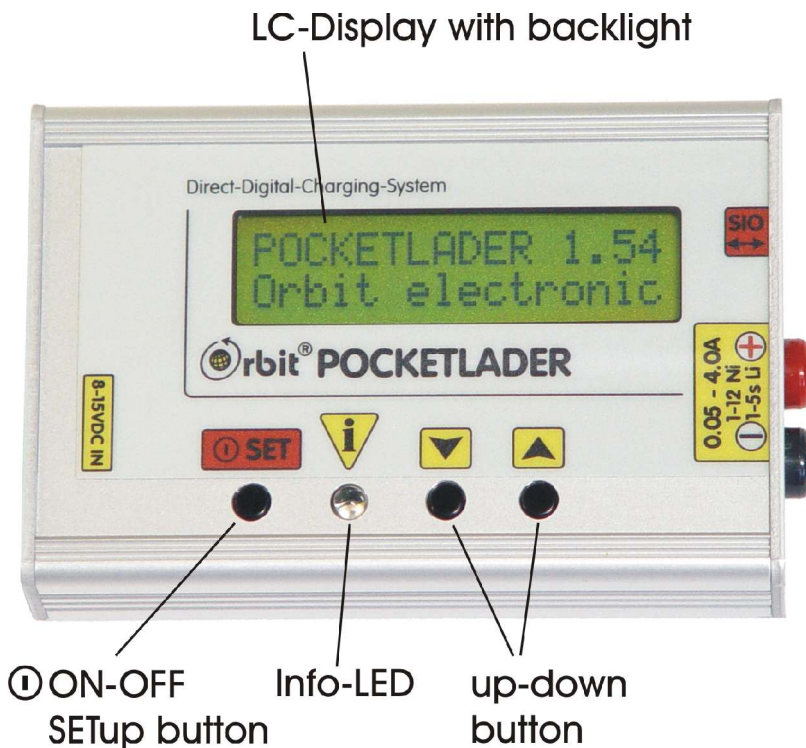

More information about using the keys and the meaning of the displays can be found in the following sections.

## Turning On and Off

First connect the power supply (stabilised DC power adapter with 8 V - 15 V or a sufficiently dimensioned battery) to the charger.

- To turn the device **on**, keep the **SET** key pressed for **2 seconds**.

You can also configure the device to switch on automatically as soon as the power supply is connected (see section **Setup Mode**, page 22, setup parameter 16:POWERUP-ON YES).

- By keeping the **SET** key pressed for **4 seconds** when turning the device on, the charger switches into **Setup mode**. In this mode, you can modify the basic configuration settings of your POCKETLADER. For more information, see the section **Setup Mode** starting on page 22.
- To turn the charger **off**, press the **SET** key again and keep it pressed until the device switches off.




## Charging and Discharging

First select the charging program (mode) suitable for your battery type by pressing the **Up/Down** keys. The program is shown in the upper left corner of the display.

### 1. NiCd and NiMh (NiXx) Batteries

These battery types are charged with a selectable constant current. The charging process is terminated either by delta peak detection ( $\blacktriangle$ -cut-off when the battery is full) or by charging current drop-down (NiXx). At the latest, after 14 hours (cut-off timer). The display shows the following information:

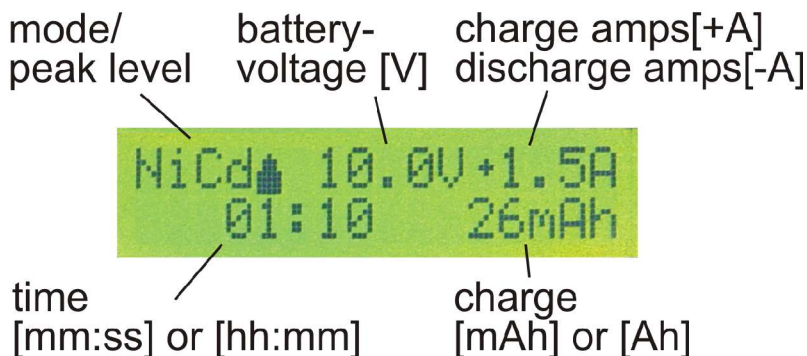

For each battery type (NiMh and NiCd), two different delta peak switch-off values can be selected, symbolised by the size of the triangle icon (delta) after the program name. The NiXx mode uses CC/CV (constant current/constant voltage), see SETUP22: NiXx-cell.

## Manual – Orbit POCKETLADER 2.1

Program	Delta peak	per cell
NiMh ▲	-0.30 %	≈ -4.5 mV
NiMh+ ▲	-0.50 %	≈ -7.5 mV
NiCd ▲	-0.70 %	≈ -10.5 mV
NiCd+ ▲	-1.30 %	≈ -19.5 mV
NiXx	CC/CV Voltage SETUP22: NiXx-cell	

To achieve an optimal charging result and temperature behaviour, we recommend the higher delta peak values (programs **NiMh+** and **NiCd+**) for charging currents up to 1.5 C\* and the smaller values (**NiMh** and **NiCd**) for currents above 1.5 C\*.

### Charging current preselection

To select the charging or discharging current, first press the **SET** key and then the **Up/Down** keys to switch between the available values.

- For **charging**, select a **positive** current value (+0.05 A to +4.0 A).
- For **discharging**, select a **negative** current value (-0.05 A to -3.0 A).

## Manual – Orbit POCKETLADER 2.1

Program	Recommended charging current
NiMh ▲	1.5 C to 2 C*
NiMh+ ▲	0.5 C to 1.5 C*
NiCd ▲	1.5 C to 4 C*
NiCd+ ▲	0.5 C to 1.5 C*
NiXx (format mode)	NiMh: 0.1 C to 0.5 C* NiCd: 0.1 C to 1.0C*

**Caution:** Please use always the charging amperage and voltage limits recommended by the battery manufacturer!

### Limiter preselection

To limit a charge or discharge [mAh], press the **SET** key for longer 1 second (tick) and then the **Up/Down** keys to switch between the available values [mAh]

Range: 50mAh – 9900mAh

During the charge or discharge process the Limiter will be displayed by a toggling charge mAh, i.e. L=44.5%.

Notice: A change of the charging mode deactivates the limiter, e.g. no-limit.

## Combi mode

A follow-up charge or discharge (combi program) process can be activated by pressing the **SET** key for longer 1 second during the Charging current preselection (tick, tick). Use the **Up/Down** keys to switch between the available combi values.

CHARGE => DISCHARGE

- For **discharging**, select a **negative** current value (-0.05 A to -3.0 A).

DISCHARGE => CHARGE

- For **charging**, select a **positive** current value (+0.05 A to +4.0 A).

## Current re-adjustment

To re-adjust the charge or discharge current during the running process simply use the **Up/Down** keys to switch between the available values. For the ▲ peak modes in the first 3 minutes only.

The **SET** key for longer 1 second cuts the running process, if desired.

Generally, for any possible control during the running process the SETUP:23 KEY-LOCK must set to NO.

## Manual – Orbit POCKETLADER 2.1

The following **Setup** parameters are relevant for these programs (see section **Setup Mode** starting on page 22):

12: AUTO-DISCHRG YES / NO

13: CHARGEPOWER 10W to 60 W

22: NiXx-CELL \*1.45V

23: KEY-LOCK YES/NO


**Caution:** Please use always the charging amperage and voltage limits recommended by the battery manufacturer!

\* *The charging rate C is the battery capacity per hour. Example:  
RC2400 ⇒ 2400 mAh/h ⇒ 0.5 C = 1.2 A; 1 C = 2.4 A etc.*

## 2. Lithium Ion and Lithium Polymer Batteries

These battery types are charged with a manually selected current CC and a constant charging voltage CV. The charging process is terminated automatically when a full battery is detected due to a drop-down of the charging current (see SETUP:18 Li-Pb CUT-OFF), or, at the latest, after 14 hours (cut-off timer).

First select the charging program (mode) suitable for your battery type (**Lion** or **LiPo**) by pressing the **Up/Down** keys. The program is shown in the upper left corner of the display. If an Orbit **LiPo-Checker** (see page 29) is actively monitoring at the SIO interface (flashing), a \* is displayed behind the program name (**LiPo\***).

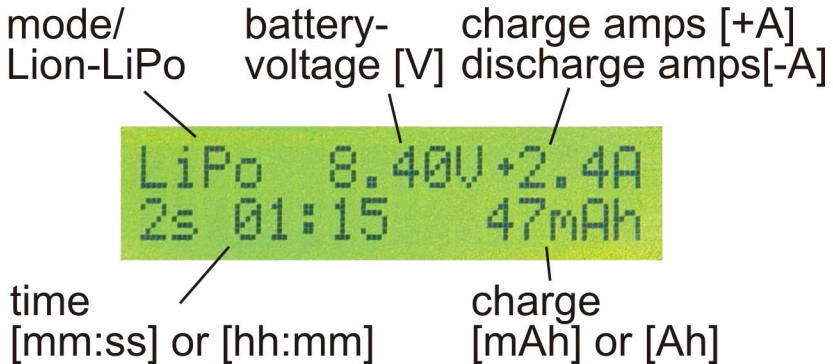

The series cells of the connected battery (1s to 5s) are detected automatically and shown in the display. In case the number displayed is not correct, use the **Up/Down** keys to select the correct number of series cells. Afterwards, confirm your selection with the **SET** key. The constant charging voltage is set depending on the series cells and the SETUP20: Lion-cell or SETUP21: LiPo-cell settings.

Example:

<b>Program</b>	<b>Charging voltage (1s to 5s)</b>	<b>per cell</b>
Lion	4.1 V 8.2 V 12.3 V 16.4 V 20.5 V	*4.10 V
LiPo	4.2 V 8.4 V 12.6 V 16.8 V 21.0 V	*4.20 V

**Caution:** Always make sure that the correct charging voltage for the respective number of series cells is used, because excessive voltage can cause the battery to burn or explode! For your 4.2 V lithium batteries, we recommend the Orbit LiPo-Checker (see page ) as an additional protection.

### Charging current preselection

To select the charging or discharging current, first press the **SET** key and then the **Up/Down** keys to switch between the available values.

- For **charging**, select a **positive** current value (+0.05 A to +4.0 A).
- For **discharging**, select a **negative** current value (-0.05 A to -3.0 A).

<b>Program</b>	<b>Recommended charging current</b>
Lion	0.5 C to 1 C*
LiPo	0.5 C to 2 C*

**Caution:** Please use always the charging amperage and voltage limits recommended by the battery manufacturer!

### **Limiter preselection**

To limit a charge or discharge [mAh], press the **SET** key for longer 1 second (tick) and then the **Up/Down** keys to switch between the available values [mAh]

Range: 50mAh – 9900mAh

During the charge or discharge process the Limiter will be displayed by a toggling charge mAh, i.e. L=44.5%.

Notice: A change of the charging mode deactivates the limiter, e.g. no-limit.

### **Combi mode**

A follow-up charge or discharge (combi program) process can be activated by pressing the **SET** key for longer 1 second during the Charging current preselection (tick, tick). Use the **Up/Down** keys to switch between the available combi values.

CHARGE => DISCHARGE

- For **discharging**, select a **negative** current value (-0.05 A to -3.0 A).

DISCHARGE => CHARGE

- For **charging**, select a **positive** current value (+0.05 A to +4.0 A).

- **Current re-adjustment**



To re-adjust the charge or discharge current during the running process simply use the **Up/Down** keys to switch between the available values.

The **SET** key for longer 1 second cuts the running process, if desired.

Generally, for any possible control during the running process the SETUP:23 KEY-LOCK must set to NO.

The following **Setup** parameters are relevant for these programs (see section **Setup Mode** starting on page 22):


- 12: AUTO-DISCHRG YES / NO
- 13: CHARGEPOWER 10W to 60 W
- 17: Li-Pb INFO I/2 to I/160 typ. I/10
- 18: Li-Pb CUT-OFF I2/ to I/160 typ. I/20
- 20: Lion-CELL 4.00V to 4.20V typ. 4.10V
- 21: Lipo-CELL 4.10V to 4.23V typ. 4.20V
- 23: KEY-LOCK YES/NO

*\* The charging rate C is the battery capacity per hour. Example:  
RC2400  $\Rightarrow$  2400 mAh/h  $\Rightarrow$  0.5 C = 1.2 A; 1 C = 2.4 A etc.*

### 3. Lead and Lead Acid Batteries (Pb)

These battery types are charged with a manually selected current CC and a constant charging voltage CV. The charging process is terminated automatically when a full battery is detected due to a drop-down of the charging current (see SETUP:18 Li-Pb CUT-OFF), or, at the latest after 14 hours (cut-off timer).

First select the charging program (mode) **Pb** by pressing the **Up/Down** keys. The program is shown in the upper left corner of the display. The display shows the following information:

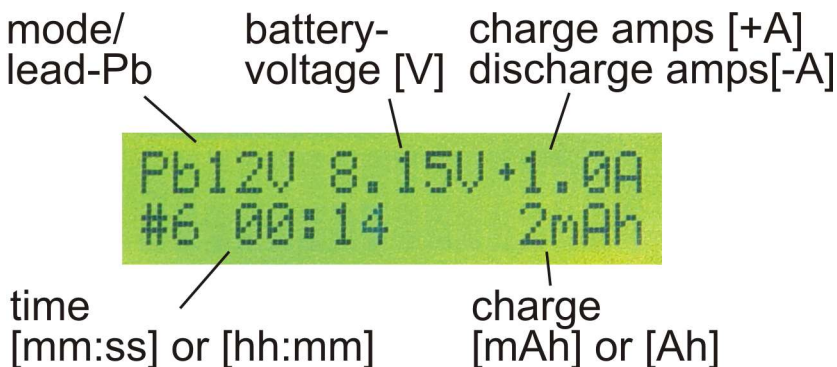

The series cells of the connected battery (Pb2V to Pb16V) are detected automatically and shown in the display. In case the number displayed is not correct, use the **Up/Down** keys to select the correct number of cells. Afterwards, confirm your selection with the **SET** key.

The constant charging voltage is set as follows, depending on the number of cells and SETUP19: Pb-LEAD-CELL:

## Manual – Orbit POCKETLADER 2.1

Program	Charging voltage Pb2V to Pb16V	per cell
Pb	2.45 V 4.9 V 7.35 V 9.8 V 12.25 V 14.7 V 17.15 V 19.6 V	*2.45 V see Setup 19

**Caution:** Always make sure that the correct charging voltage for the respective number of series cells is used, because excessive voltage can cause the battery to overheat!

### Charging current preselection

To select the charging or discharging current, first press the **SET** key and then the **Up/Down** keys to switch between the available values.

- For **charging**, select a **positive** current value (+0.05 A to +4.0 A).
- For **discharging**, select a **negative** current value (-0.05 A to -3.0 A).

Program	Recommended charging current
Pb	0.1 C to 0.5 C*

**Caution:** Please use always the charging amperage and voltage limits recommended by the battery manufacturer!

## **Limiter preselection**

To limit a charge or discharge [mAh], press the **SET** key for longer 1 second (tick) and then the **Up/Down** keys to switch between the available values [mAh]

Range: 50mAh – 9900mAh

During the charge or discharge process the Limiter will be displayed by a toggling charge mAh, i.e. L=44.5%.

Notice: A change of the charging mode deactivates the limiter, e.g. no-limit.

## **Combi mode**

A follow-up charge or discharge (combi program) process can be activated by pressing the **SET** key for longer 1 second during the Charging current preselection (tick, tick). Use the **Up/Down** keys to switch between the available combi values.

CHARGE => DISCHARGE

- For **discharging**, select a **negative** current value (-0.05 A to -3.0 A).

DISCHARGE => CHARGE

- For **charging**, select a **positive** current value (+0.05 A to +4.0 A).

## **Current re-adjustment**

To re-adjust the charge or discharge current during the running process simply use the **Up/Down** keys to switch between the available values.

The **SET** key for longer 1 second cuts the running process, if desired.

Generally, for any possible control during the running process the SETUP:23 KEY-LOCK must set to NO.

The following **Setup** parameters are relevant for these programs (see section **Setup Mode** starting on page 22):

- 12: AUTO-DISCHRG YES / NO
- 13: CHARGEPOWER 10W to 60 W
- 17: Li-Pb INFO I/2 to I/160 typ. I/10
- 18: Li-Pb CUT-OFF I2/ to I/160 typ. I/20
- 19: Pb-CELL 2.00V to 2.50V typ. 2.45V
- 23: KEY-LOCK YES/NO

*\* The charging rate C is the battery capacity per hour. Example:  
RC2400  $\Rightarrow$  2400 mAh/h  $\Rightarrow$  0.5 C = 1.2 A; 1 C = 2.4 A etc.*

## Setup Mode

In the **Setup** mode of the Orbit POCKETLADER, you can modify the basic configuration settings of the charger. To enter the Setup mode, press the **SET** key while the device is off and keep it pressed until the Setup mode is shown in the display (after about 4 seconds).

Use the **Up/Down** keys to select the Setup parameter you want to change. Pressing the **SET** key briefly will turn the respective option on/off or cycle between the available values.

The table on the following page lists all the Setup parameters you can change.

To quit the Setup mode, keep the **SET** key pressed until the device switches to normal operation.

## Configurable Setup Parameters

No.	Name	Settings	Description
11	<b>SOUND</b>	OFF, SHORT, MARCH, CLASSIC, HAPPY	Ring tone selection for "battery full" signal
12	<b>AUTO-DISCHRG</b>	YES 1/2 – 1/160 NO	Enables / disables automatic discharging with current reduction
13	<b>CHARGEPOWER</b>	10 W to 65 W	Adaptation of the max. charging power to the power supply / battery
14	<b>MIN.VOLTAGE</b>	8.0 V to 12.0 V	Sets the minimum input voltage for alarm and charging abort
15	<b>LED-FLASH</b>	YES / NO	YES: Info LED flashes when battery is full NO: Info LED continuous on when battery is full
16	<b>POWERUP-ON</b>	YES / NO	Enables / disables automatic switch-on
17	<b>Li-Pb INFO</b>	1/2 to 1/160 def. 1/10	Adjustable amps rate for the info LED (Lithium and Lead).
18	<b>Li-Pb CUT-OFF</b>	1/2 to 1/160 def. 1/20	Adjustable amps rate for cut-off the process. (Lithium and Lead).

## Manual – Orbit POCKETLADER 2.1

No.	Name	Settings	Description
19	<b>Pb-CELL</b>	2.00V to 2.50V reset: 2.45V	Cell voltage CV for lead batteries. Standby: 2.30V Fastcharge: 2.45V
20	<b>Lion-CELL</b>	4.00V to 4.20V reset: 4.10V	Cell voltage CV for lithium-ion batteries.
21	<b>LiPo-CELL</b>	4.10V to 4.23V reset: 4.20V	Cell voltage CV for lithium polymer batteries.
22	<b>NiXx-CELL</b>	1.20V to 1.70V reset: 1.45V	Cell voltage CV for NiXx (NiMh/NiCd) batteries.
23	<b>KEY-LOCK</b>	NO YES	Key control during charge or discharge.
24	<b>*RESET-VALUES</b>	NO YES	Reload reset values.


**Caution:** Please use always the charging amperage and voltage limits recommended by the battery manufacturer!



## The SIO Interface

The SIO connector (**S**erial **I**nput / **O**utput) of your Orbit POCKETLADER serves as an interface for data exchange with a PC. For the data transfer, you need a serial SIO cable, which you can order via the Orbit webshop (<http://orbit-electronic.de>, item no. 0588, SIO PC cable COM, or item no. 0590, SIO PC cable USB).

Together with the cable, you will receive the Windows application **Orbit Microlog**, which you can use, for example, to record and display the charging curves of your batteries, to identify battery problems and to update the control software (firmware) of your POCKETLADER (see next page). You can always download the latest Microlog version on the order page of the SIO PC cable in our webshop.

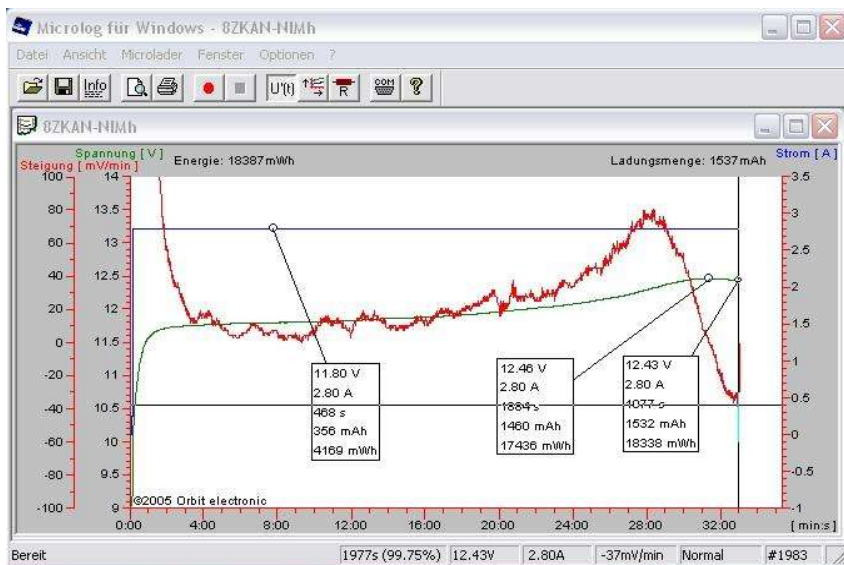

The Microlog software in action

## Updating the POCKETLADER Firmware

1. Connect the POCKETLADER to the PC using the SIO cable.
2. Launch the Microlog application on the PC and select the menu item *Firmware-Info / Flash-Utility* in the *Options* menu.



3. Turn the POCKETLADER on. It is detected by Microlog, and the current firmware version number is displayed.



4. Now select whether the new firmware should be downloaded directly from the Orbit server via the Internet, or you want to load a local firmware file (e.g. from a floppy disk).



- The firmware versions available on the server or in the selected local directory are listed. Select the desired version and language, and click on **OK**.



- The new firmware is transferred into the flash memory of the POCKETLADER. This will take about 2 minutes. After that, your POCKETLADER is immediately ready for operation again.



## Specifications of the SIO Interface


During operation, the POCKETLADER constantly sends the current operating parameters via the SIO interface according to the following specification:

<b>Plug</b>	3.5 mm stereo jack
<b>Transmission format</b>	9600 bps, 8/n/1
<b>Data output during charging / discharging</b>	#[MC],[seconds],[mV],[±mA]CRLF each second e.g. #N00125,12455,+2500
<b>Charging stop</b>	#C,00000,[mAh],±0000CRLF

"MC" stands for "Mode Code" – depending on the operating mode, one of the following letter codes is sent:

<b>MC</b>	<b>Operating mode</b>
<b>P</b>	Delta peak automatic charging
<b>D</b>	Discharging
<b>R</b>	Reflex charging
<b>F</b>	Forming
<b>N</b>	Normal charging
<b>B</b>	Lead battery charging
<b>L</b>	Lithium

## Accessory: Orbit LiPo-Checker 4.2 V

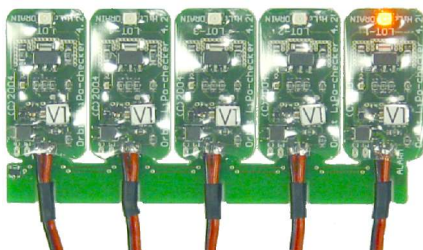

The Orbit LiPo-Checker is a precision voltage monitor for lithium polymer battery cells (LiPo, 4.2 V). It is simply connected in parallel to one our several lithium cells. In the case of voltage differences between the cells, a controlled current sink discharges the cells to the allowed level, thus balancing the voltage in the battery pack. If the allowed voltage range is exceeded nevertheless, an SIO signal is sent to the POCKETLADER via a 3.5 mm stereo jack cable. The charging current is then automatically reduced to protect the battery cells.

### Technical Specification of the LiPo-Checker:

Operating current:	10 $\mu$ A, max. 550 mA
Connectors:	Selectable: JR/Uni or BEC (Tanic) plug system
Allowed voltages:	+2.1 V to +4.5 V
Switching level:	< 2.7 V, > 4.20 V, >=4.23 V
Dimensions:	50 x 5 x 105 mm / 2" x 0.2" x 4.1"
Items included:	Orbit LiPo-Checker (5s), connection cables, plugs

The LiPo-Checker can be ordered via the Orbit webshop:  
<http://orbit-electronic.de>, item no. 0605

## Recommended Charging Currents (Overview)

Battery type	Program	Recommended charging current
Nickel metal hydride	NiMh	1.5 C to 2 C*
	NiMh+	0.5 C to 1.5 C*
Nickel cadmium	NiCd	1.5 C to 4 C*
	NiCd+	0.5 C to 1.5 C*
Lithium ion	Lion	0.5 C to 1 C*
Lithium polymer	LiPo	0.5 C to 2 C*
Lead / lead gel	Pb	0.1 C to 0.5 C*

**Caution:** Please use always the charging amperage and voltage limits recommended by the battery manufacturer!

- *The charging rate C is the battery capacity per hour. Example: RC2400 ⇒ 2400 mAh/h ⇒ 0.5 C = 1.2 A; 1 C = 2.4 A etc.*

*Notice:*